

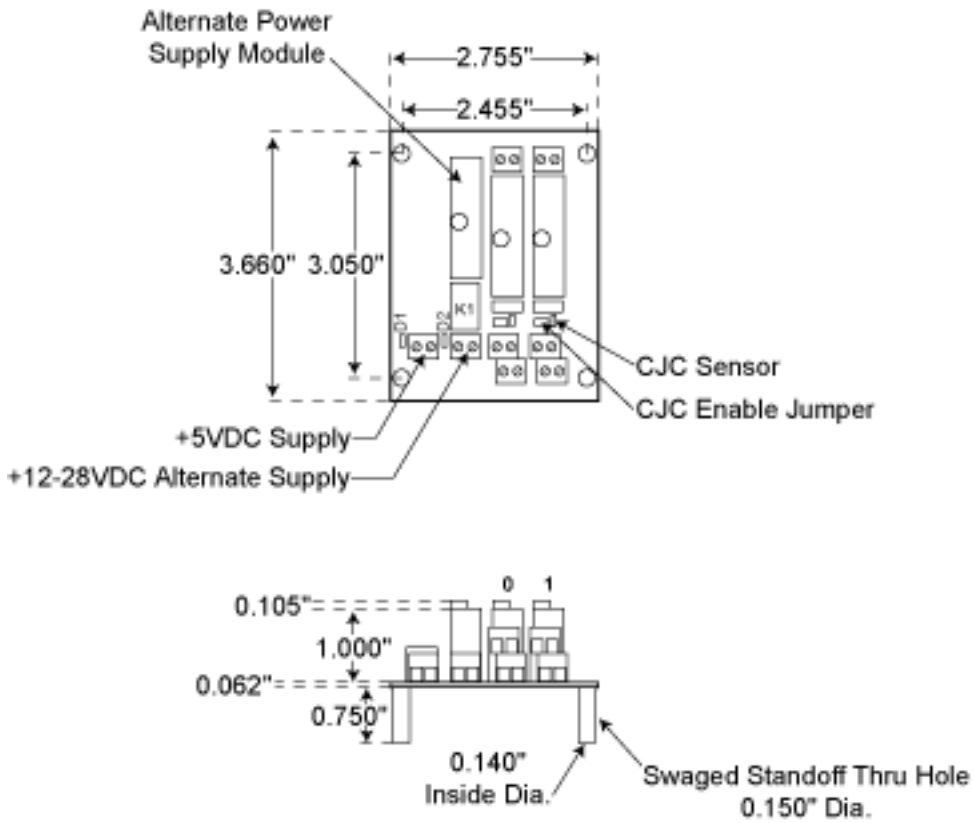


8BP Schematics



8BP02

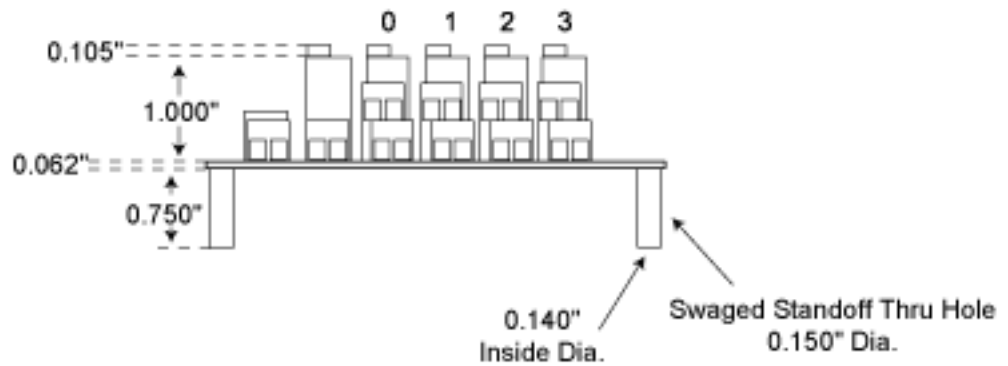


8BP04

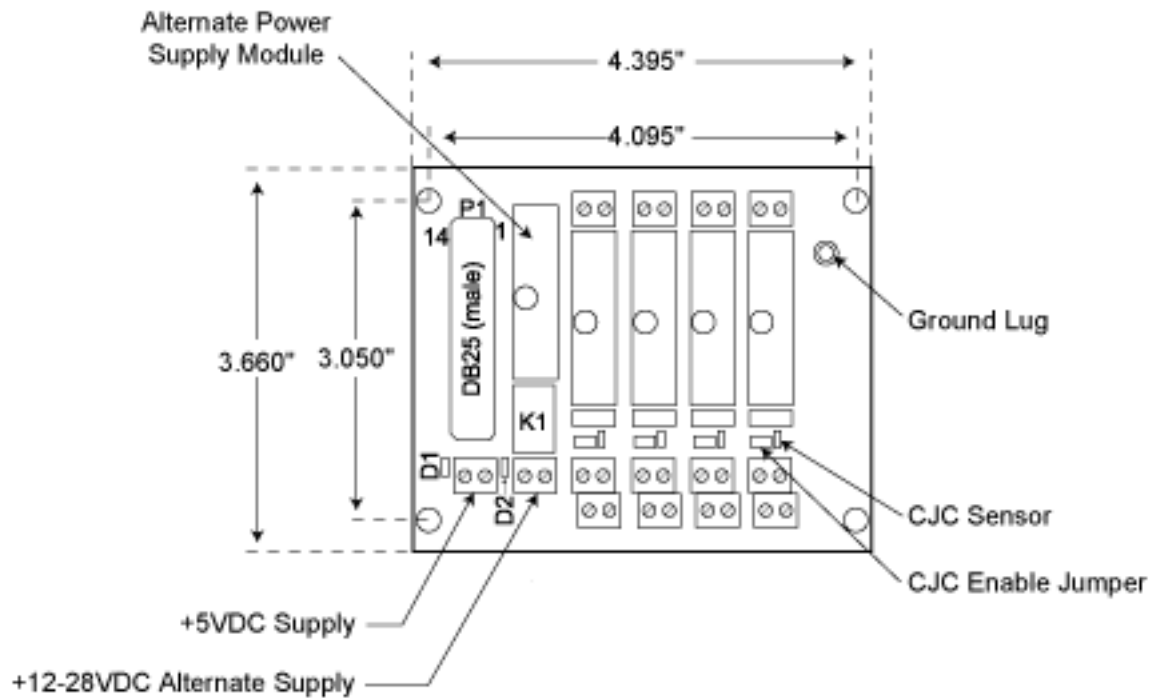


8BP08

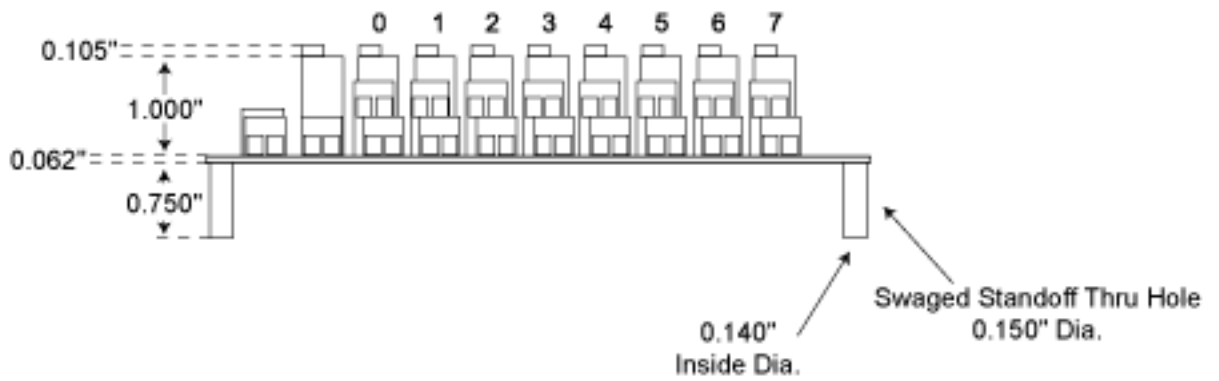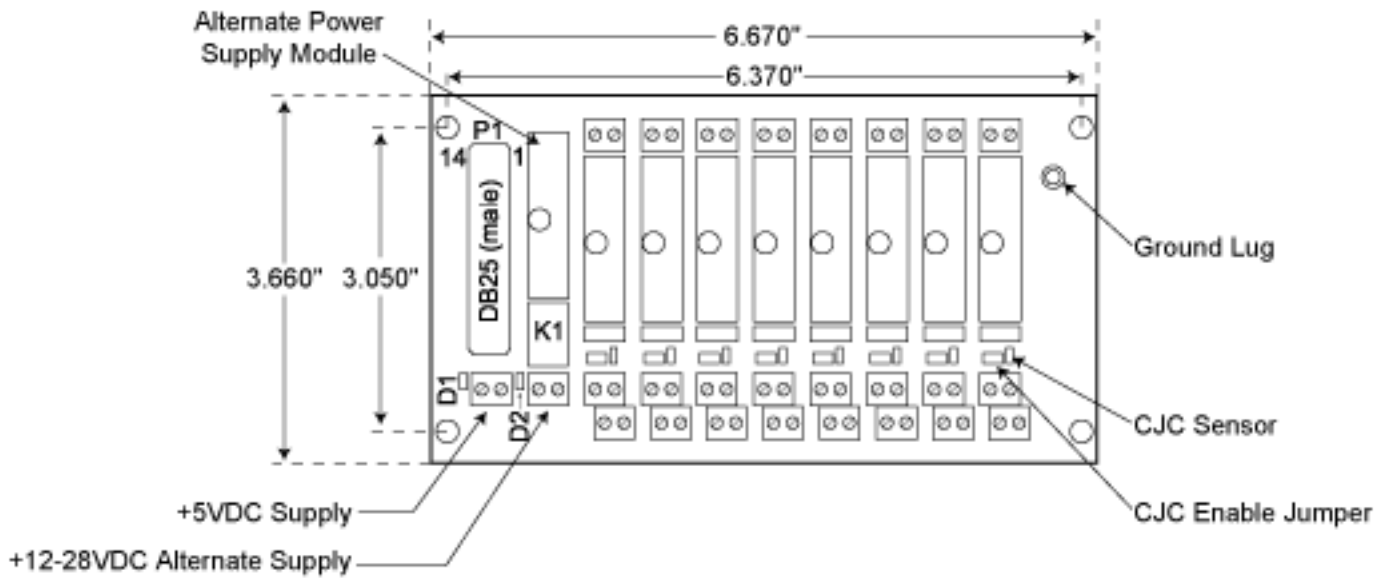

8BP16

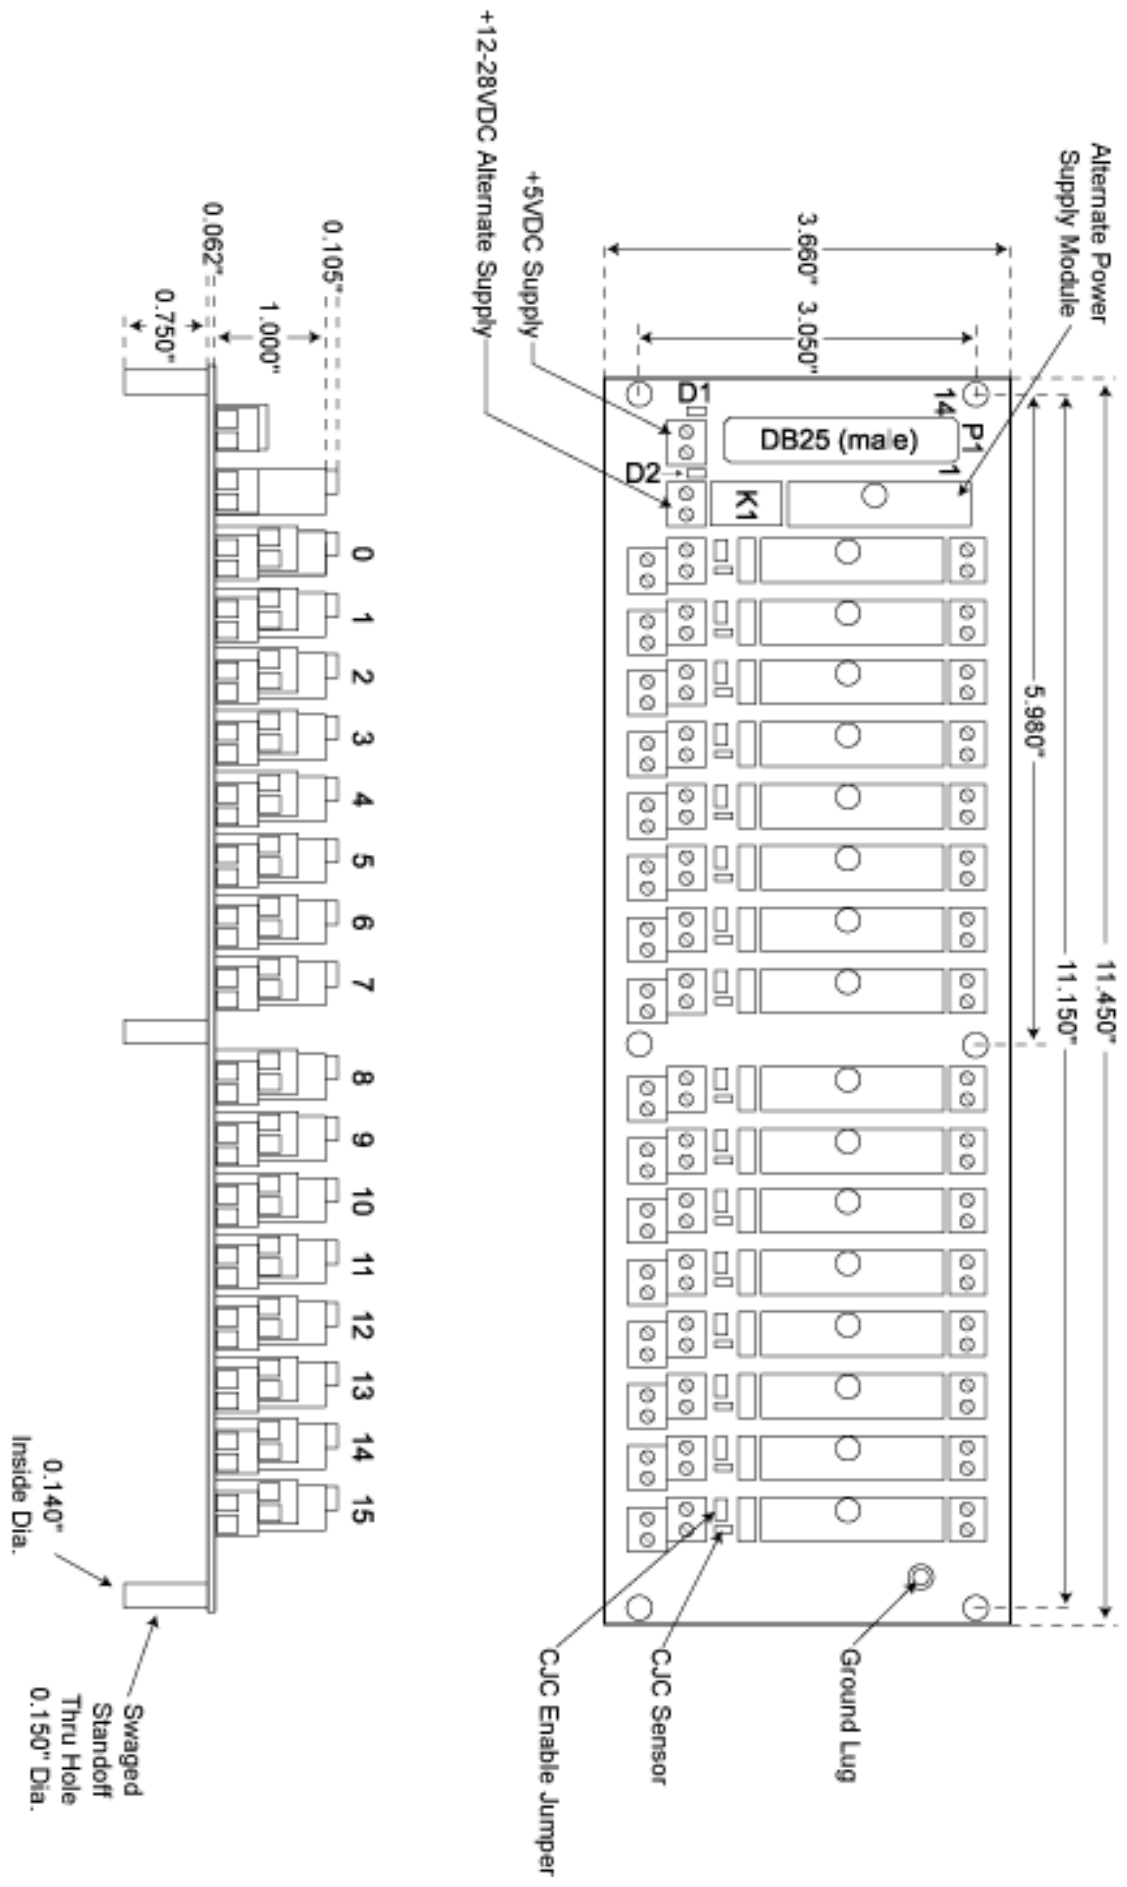

8BPxx

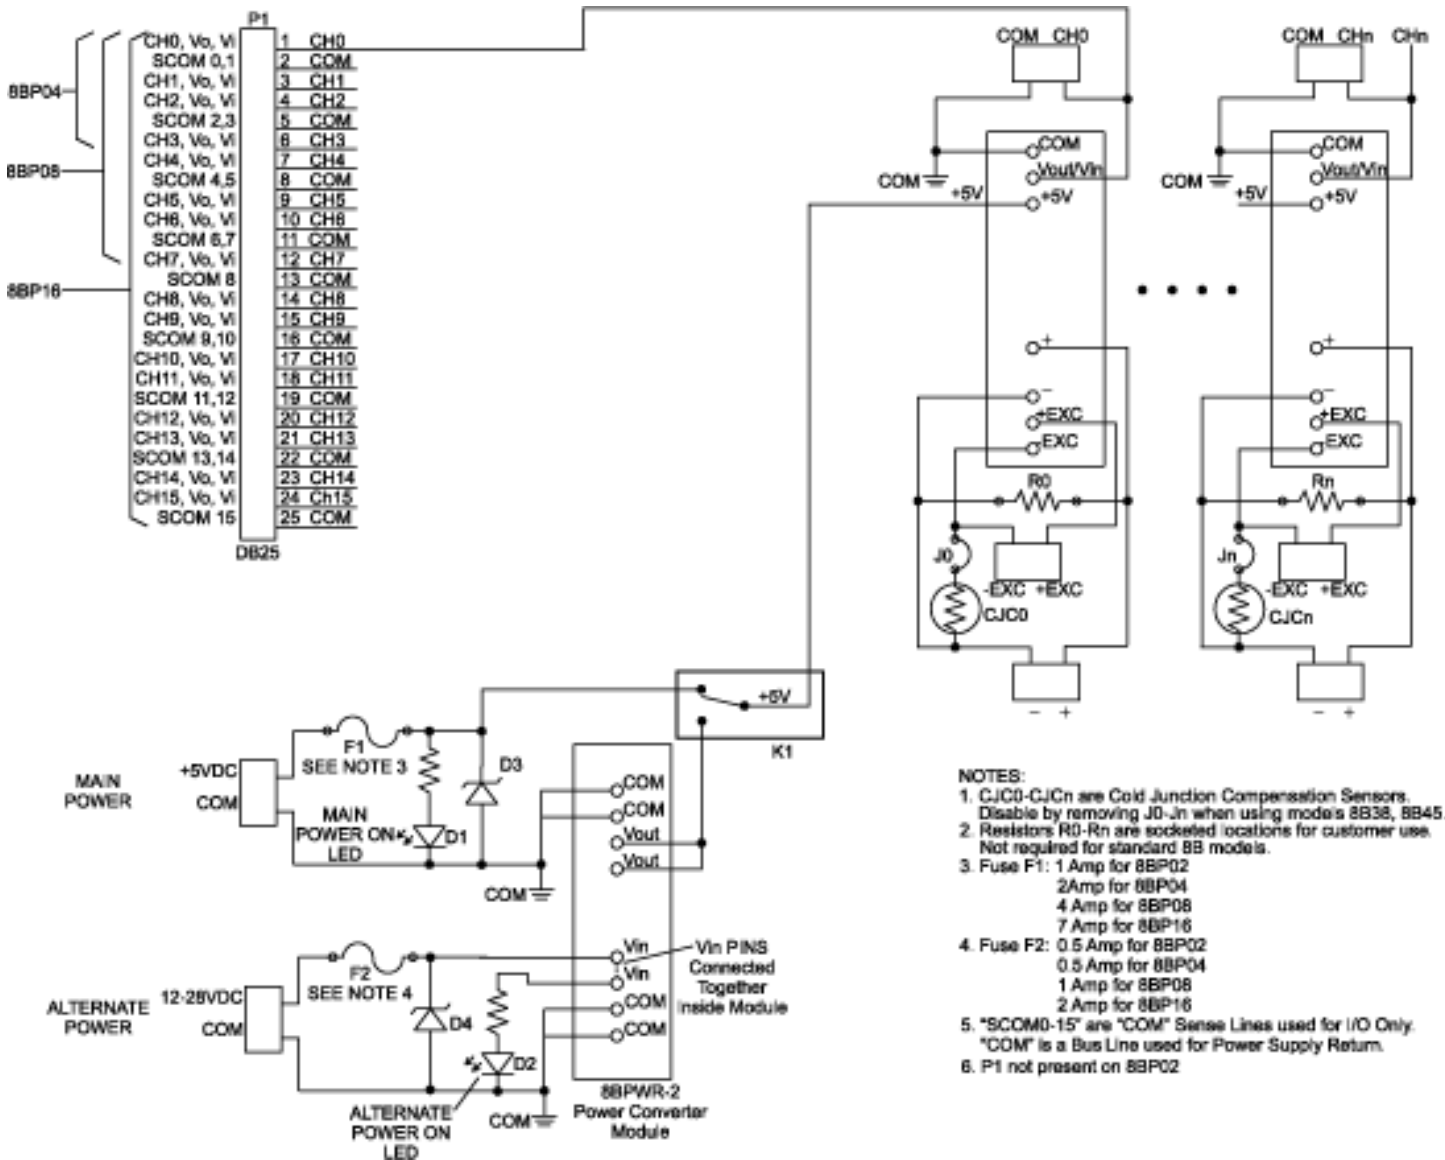

- NOTES:**
- CJC0-CJcN are Cold Junction Compensation Sensors. Disable by removing J0-Jn when using models 8B38, 8B45.
 - Resistors R0-Rn are socketed locations for customer use. Not required for standard 8B models.
 - Fuse F1: 1 Amp for 8BP02
2Amp for 8BP04
4 Amp for 8BP08
7 Amp for 8BP16
 - Fuse F2: 0.5 Amp for 8BP02
0.5 Amp for 8BP04
1 Amp for 8BP08
2 Amp for 8BP16
 - "SCOM0-15" are "COM" Sense Lines used for I/O Only. "COM" is a Bus Line used for Power Supply Return.
 - P1 not present on 8BP02



241 Springside Drive
Akron, Ohio 44333
Phone: 330-668-1444
Fax: 330-666-5434